



## W-1 WIRELESS CHARGER INSTALLATION GUIDE





## **CONTENT OF THE PACKAGE:**

**1. AC-DC POWER ADAPTER**

**2. USB SPLITTER**

**3. WIRELESS CHARGER**

**4. 2PCS OF SCREWS**

## STEP A: INSTALLATION OF THE WIRELESS CHARGER



A.1: MAKE SURE THAT THE TWIST-LOCK IS IN POSITION “UNLOCK”



A.2: INSERT THE CHARGER INTO PREPARED SOCKET AND PUSH TO THE END



A.3: TURN THE TWIST-LOCK AS CLOSE AS POSSIBLE TO THE POSITION “LOCK”



#### A.4: THREAD THE CABLE THROUGH THE HOLE ON THE BACK OF THE FURNITURE





## STEP B: INSTALLATION OF THE USB SPLITTER





**B.1: USE THE SELF-DRILLING SCREWS TO ATTACH THE USB HUB  
(IF POSSIBLE, FIRST DRILL THE HOLES USING A 3/32" DRILL BIT)**





## B.2: CONNECT THE CABLE OF THE WIRELESS CHARGER

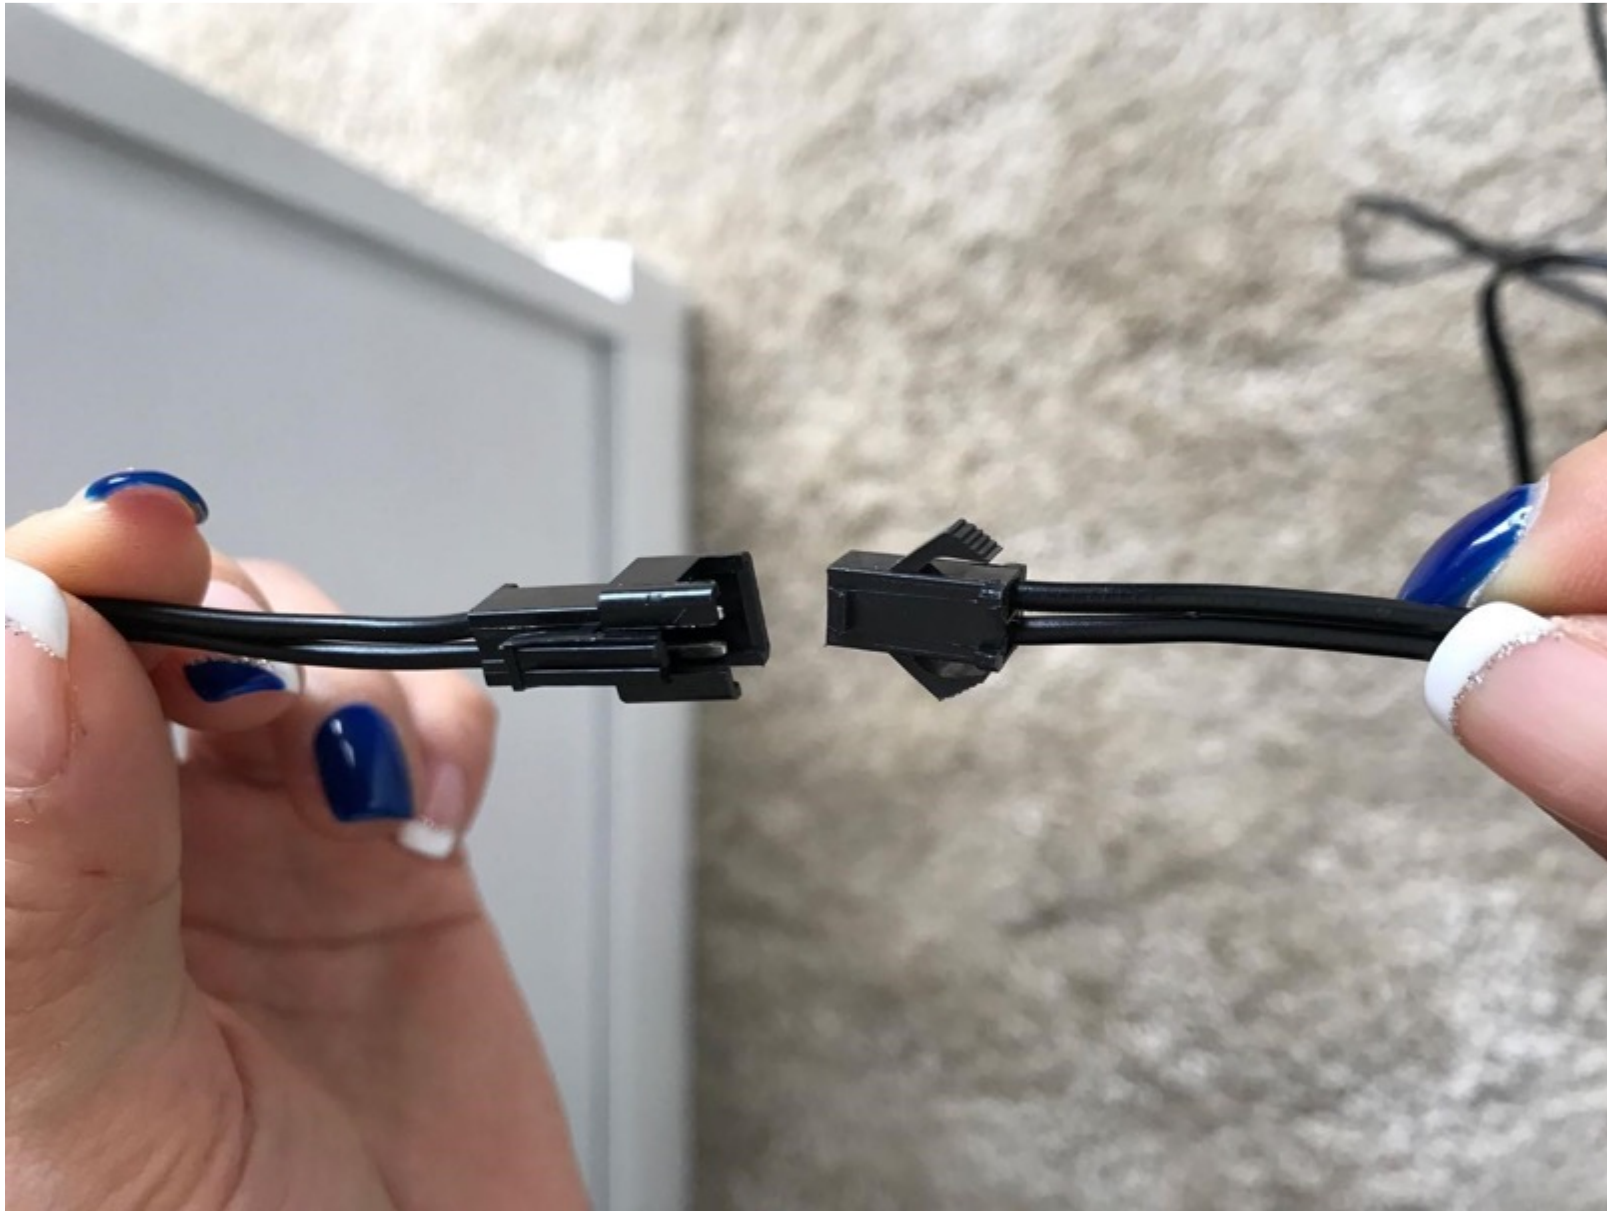

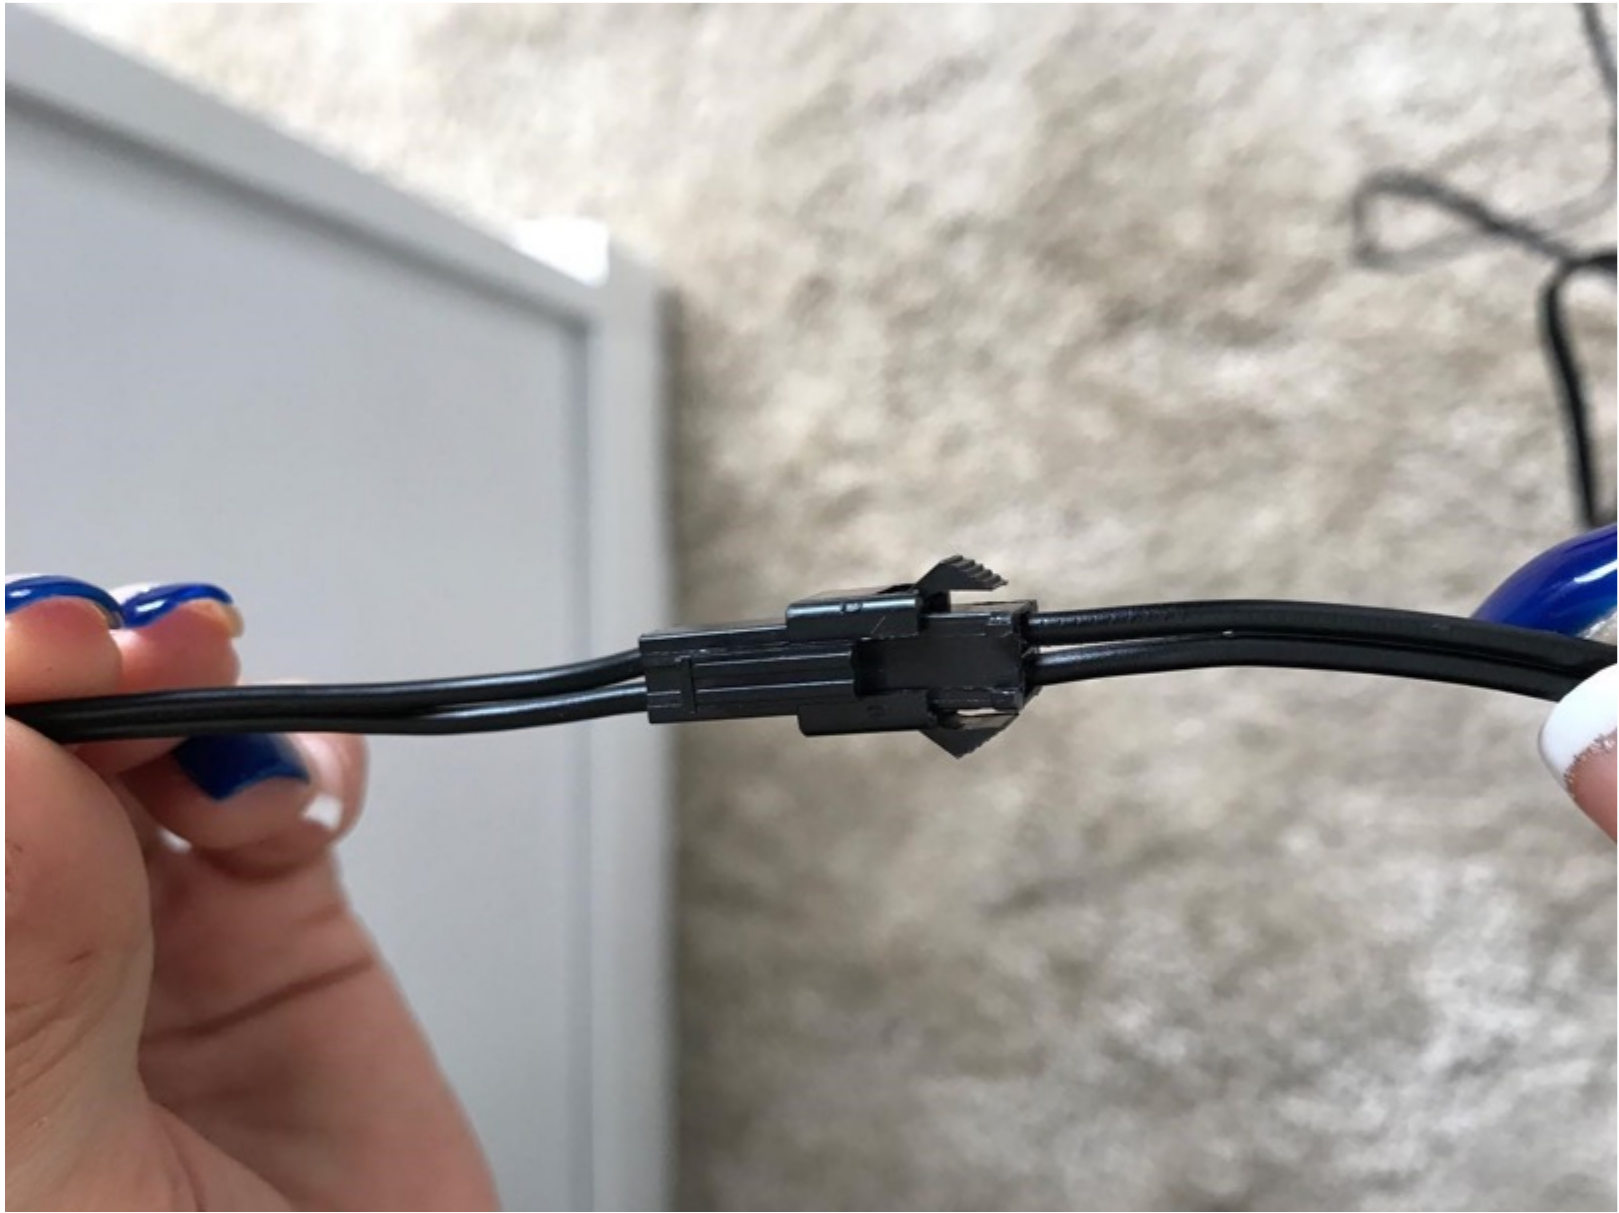

### B.3: CONNECT THE SPLITTER TO THE AC-DC POWER ADAPTER



## B.4: OPEN THE AC CONNECTOR OF THE POWER ADAPTER



## B.5: PLUG THE AC-DC POWER ADAPTER INTO THE WALL SOCKET







**CONGRATULATIONS! YOUR CHARGER IS READY TO USE**





IN CASE OF ANY QUESTIONS PLEASE CONTACT OUR CUSTOMER SERVICE  
----- **(844)392-4439** -----